

Flair Showers Ltd., Rocks Road, Kingscourt, Co. Cavan, Ireland
 Sales Office Direct Telephone:+353 42 966 8000
 www.flairshowers.com

Where a shower enclosure has been installed contrary to these instructions Flair Showers Ltd cannot accept liability for any consequential loss or damage.

NEW SLIMLINE TELESCOPIC flair

PIVOT DOOR Shower Enclosure




Thank you for choosing a Flair product.

This product is fully compliant with EN14428 (European Standard for Functional Requirements and Test Methods for Shower Enclosures)

BEFORE YOU INSTALL YOUR SHOWER ENCLOSURE PLEASE READ ALL INSTRUCTIONS. FAILURE TO DO SO MAY LEAD TO INVALIDATION OF YOUR WARRANTY

- The shower tray **MUST** be fitted level, tiled in and sealed along its entire wall length.
- Glass door edges are vulnerable. Contact with hard surfaces may result in glass breakage.
- The shower enclosure should be sealed on the outside using silicone sealant.
- Check walls for electrical cabling or water pipes before drilling.

Tools required to install your shower enclosure

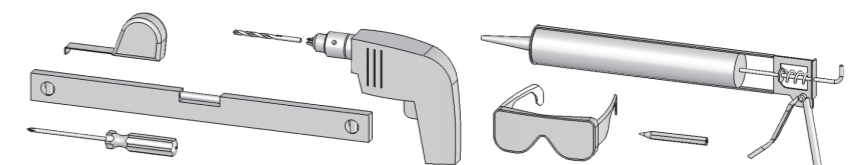

Slimline

Installation Instructions

ITEM		Quant.
(D)		1 Pc
(E)		6 Pc
(F)		6 Pc
(G)		12 Pc
(H)		6 Pc
(I)		12 Pc
(J)		1+1 Pc
(K)		2 Pc
(L)		1+1 Pc
(M)		1 Pc

